

PRO POND FOUNTAIN AERATOR

1HP WITH SMART RGB LIGHTING



Landscaping



Aeration



High Power



High Efficiency



Easy to Install



2-Year Warranty

Voltage: 120VAC/60HZ

Flow Rate: 15,000GPH

Horsepower: 1HP

Cable: 100FT

Power: 750W



Our Brands

Pondvita[®] | Zenhagu[®] | FOXLUX[®] | Generalman[®] | Jeavle[™]

Manufacturer: Foxsun Industry International Group Ltd.

Customer Service: Customer@foxluxpool.com

Made in China

Online Website: www.foxluxpool.com

Youtube: www.youtube.com/@FoxluxPool

WARNING

1. Please read this product manual carefully before use.

2. For safety, the electric pump must be connected to a reliable grounded socket and equipped with an overload leakage protector.

3. Dry running or running without water is strictly prohibited. Pulling the power cord is prohibited. It should be lifted and lowered with a rope.

4. Before maintaining or cleaning the electric pump, the power must be cut off.



Entanglement Hazard



Shock Hazard

CHOKING HAZARD

 
This item contains small parts which can be swallowed by children. Please keep it away from children under 3 years old and pets during installation.

UNIT SPECIFICATIONS

Model	FX-1HP-B001-WL-BK
Spray Height	6 FT
Spray Width	15 FT
Voltage	120V/60HZ
Max.Amps	6.8A
Power	750W
Output Power	1HP
Max. Flow	15,000GPH
Power Cord	100FT



1.PARTS INCLUDED

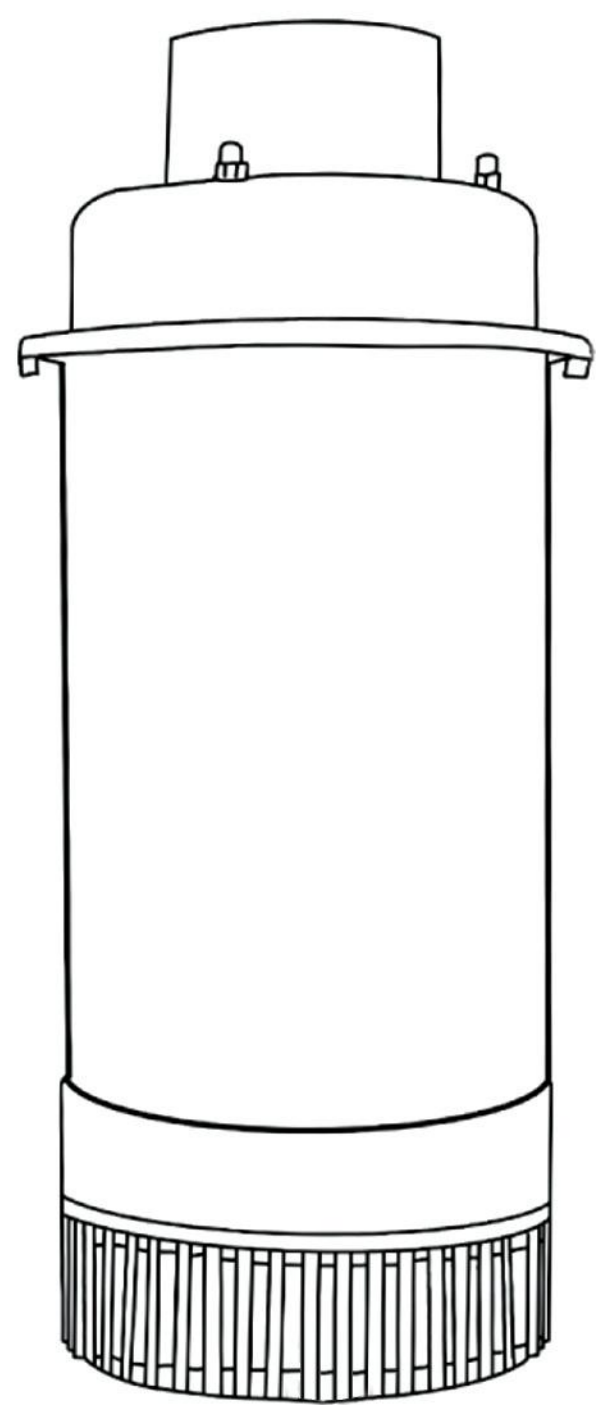

Pond Aerator Fountain x1




RGB Lightx1



Floatx1



 Wire Nutsx10

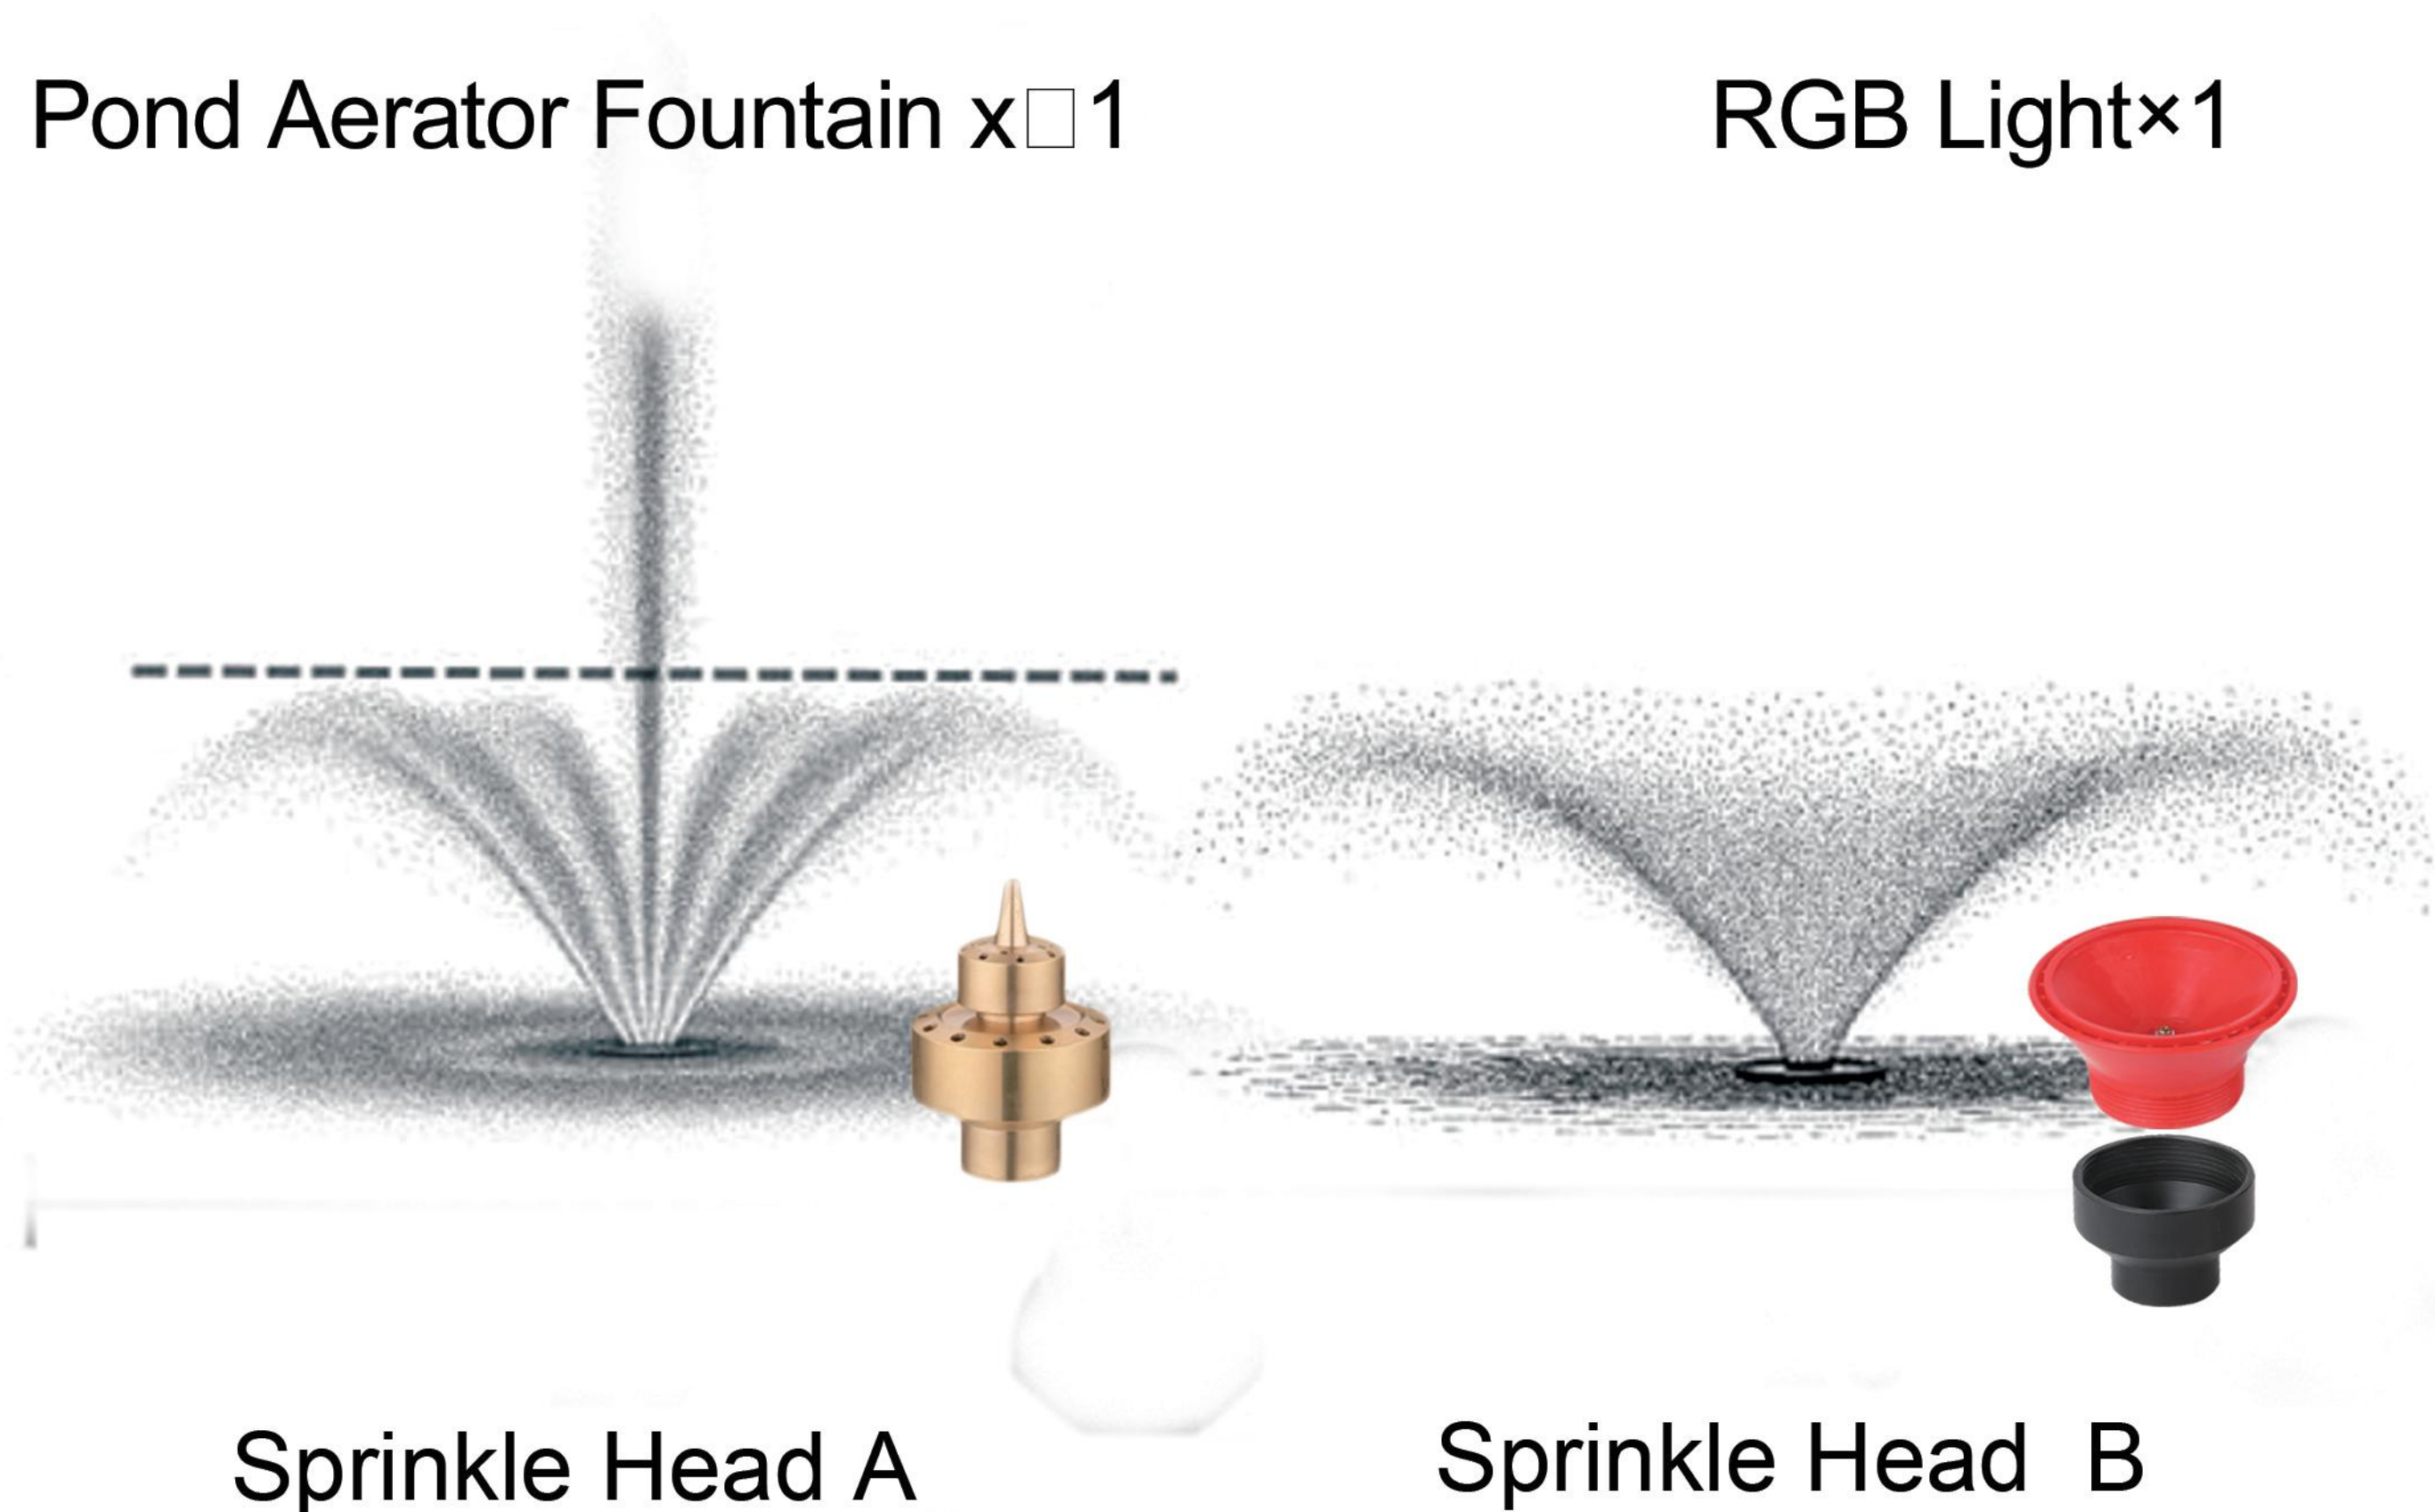

Sprinkle Head A

Sprinkle Head B



Smart Controllerx1



Screw Ax4 sets(Screws for fix J-box fixtures)



Waterproof Jointx2



Remote Controller x1



Screw Cx4 Sets
(Screws for fix float)



101ft Braided Nylon Ropex2



Metal Ground Stakesx2

2.ASSEMBLY INSTRUCTIONS

Step 4 Screw the Sprinkle Head (A)or (B) on the RGB Light (D)



Step 3 Screw the RGB Light (D) on the Pond Aerator Fountain (C)

 


Step 2 Put the Floaters(A)between the RGB Light (D) and the Pond Aerator Fountain (C)




Pay attention to the order of the screws.


Step 1 Connect the floaters(A) by Screws C

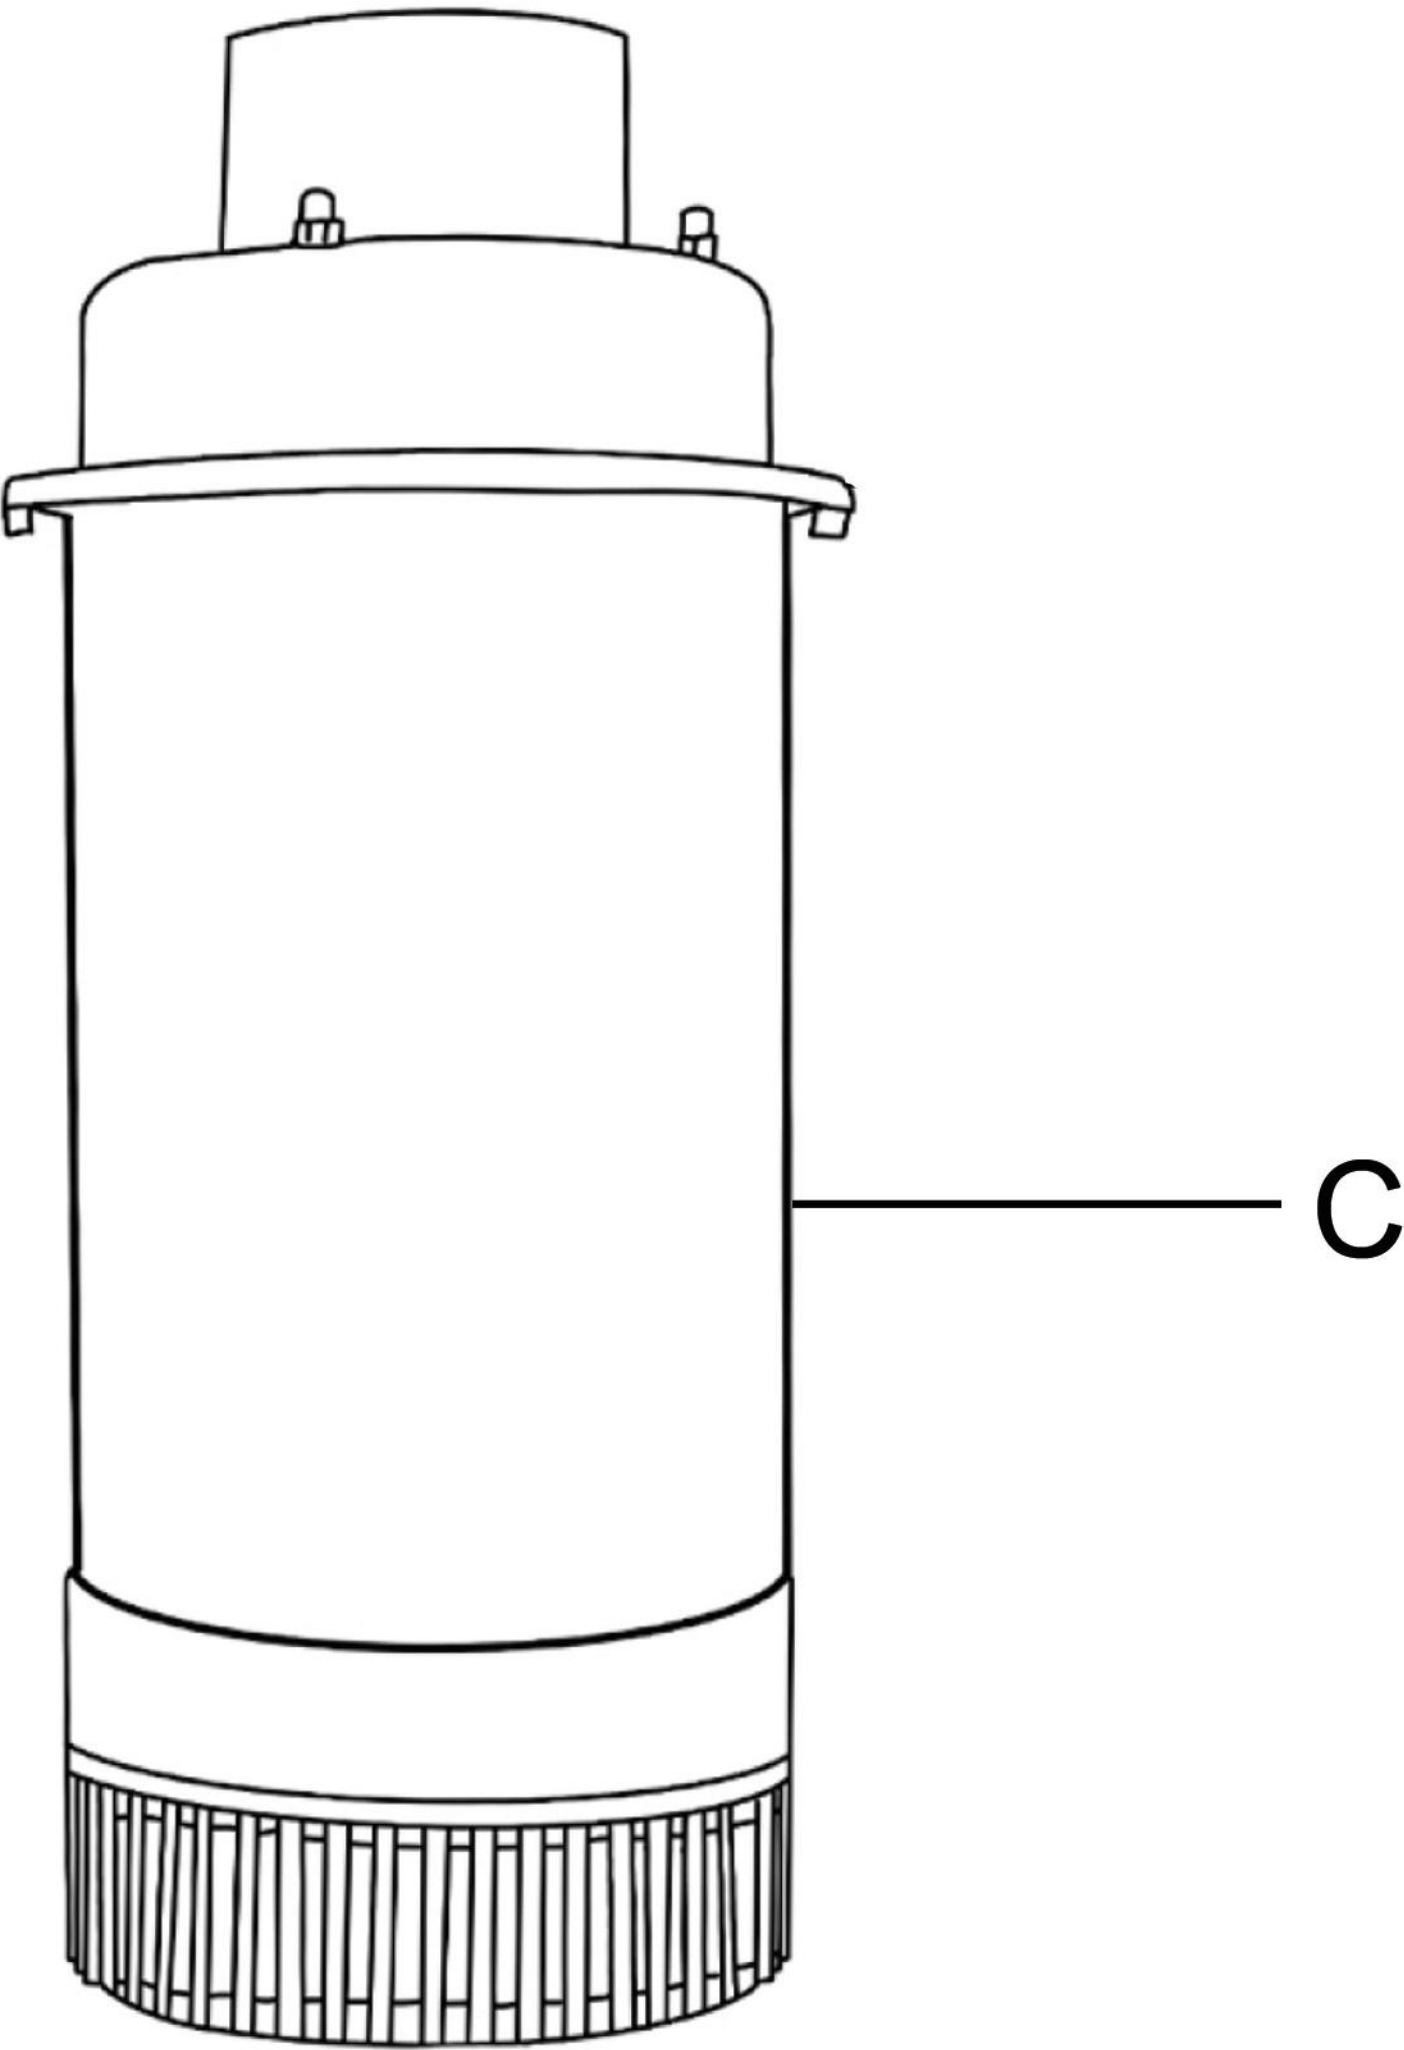

 
3.CONNECTION DIAGRAM

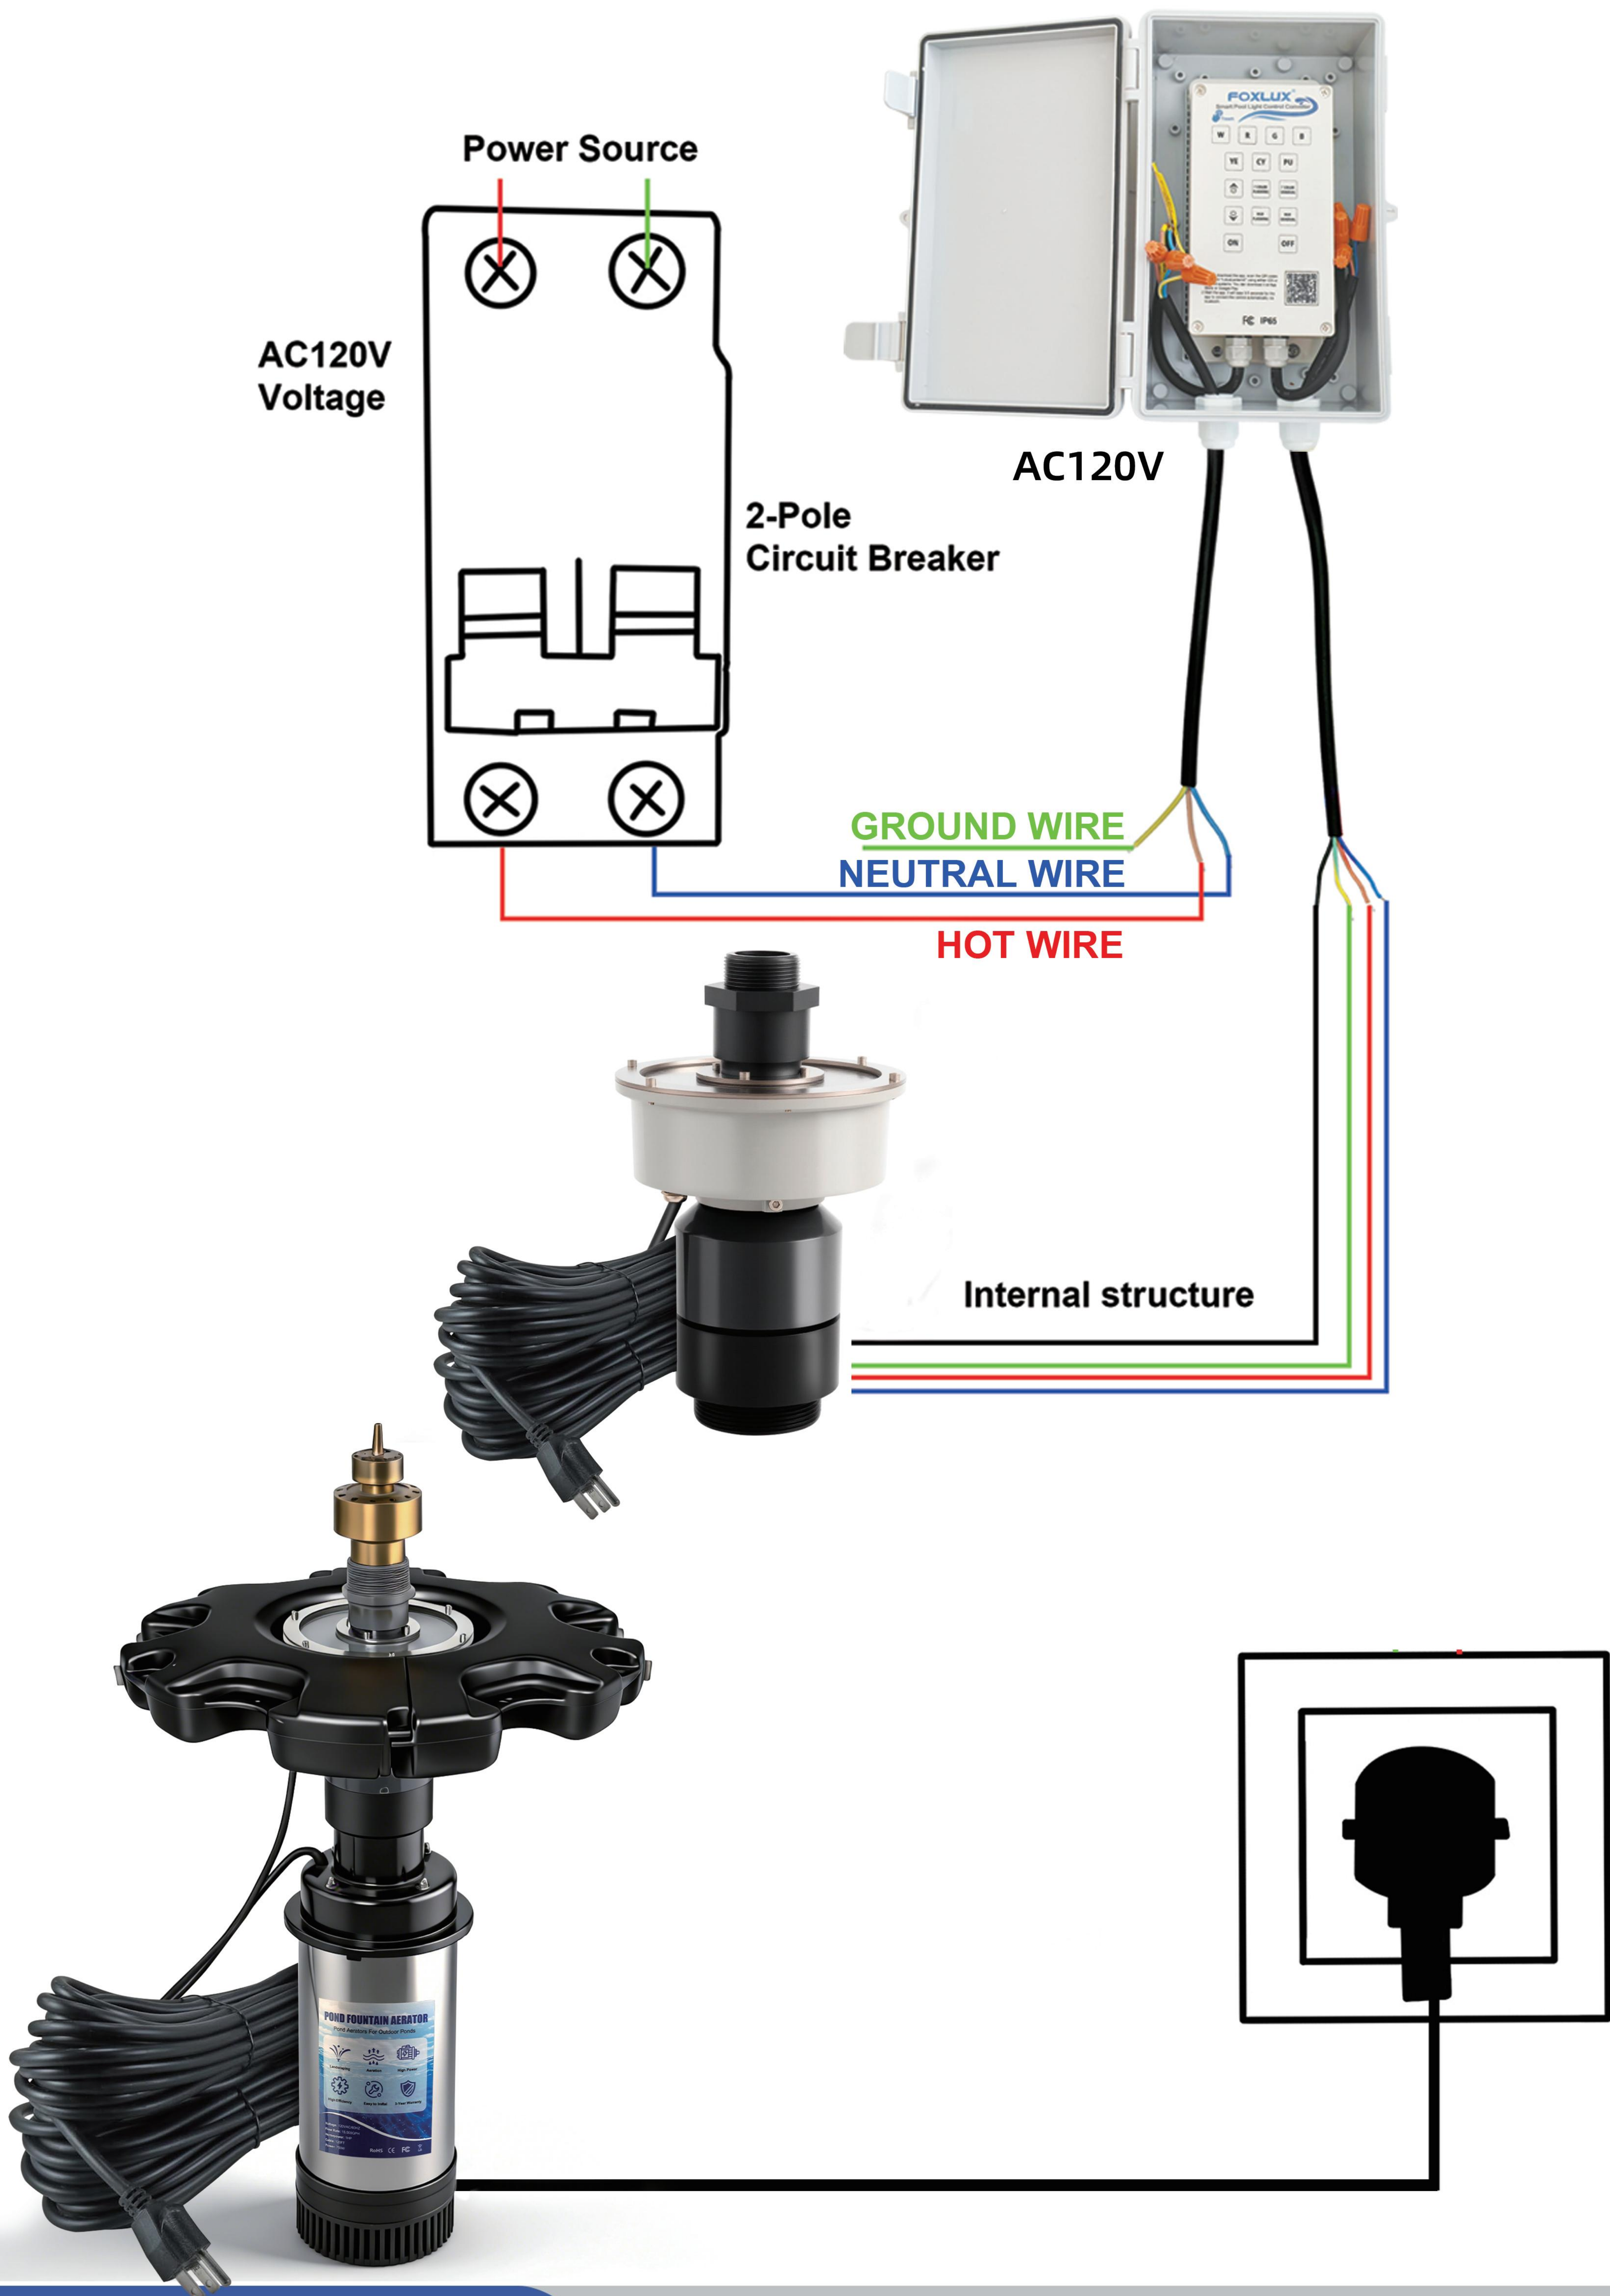

 4.USAGE INSTRUCTIONS

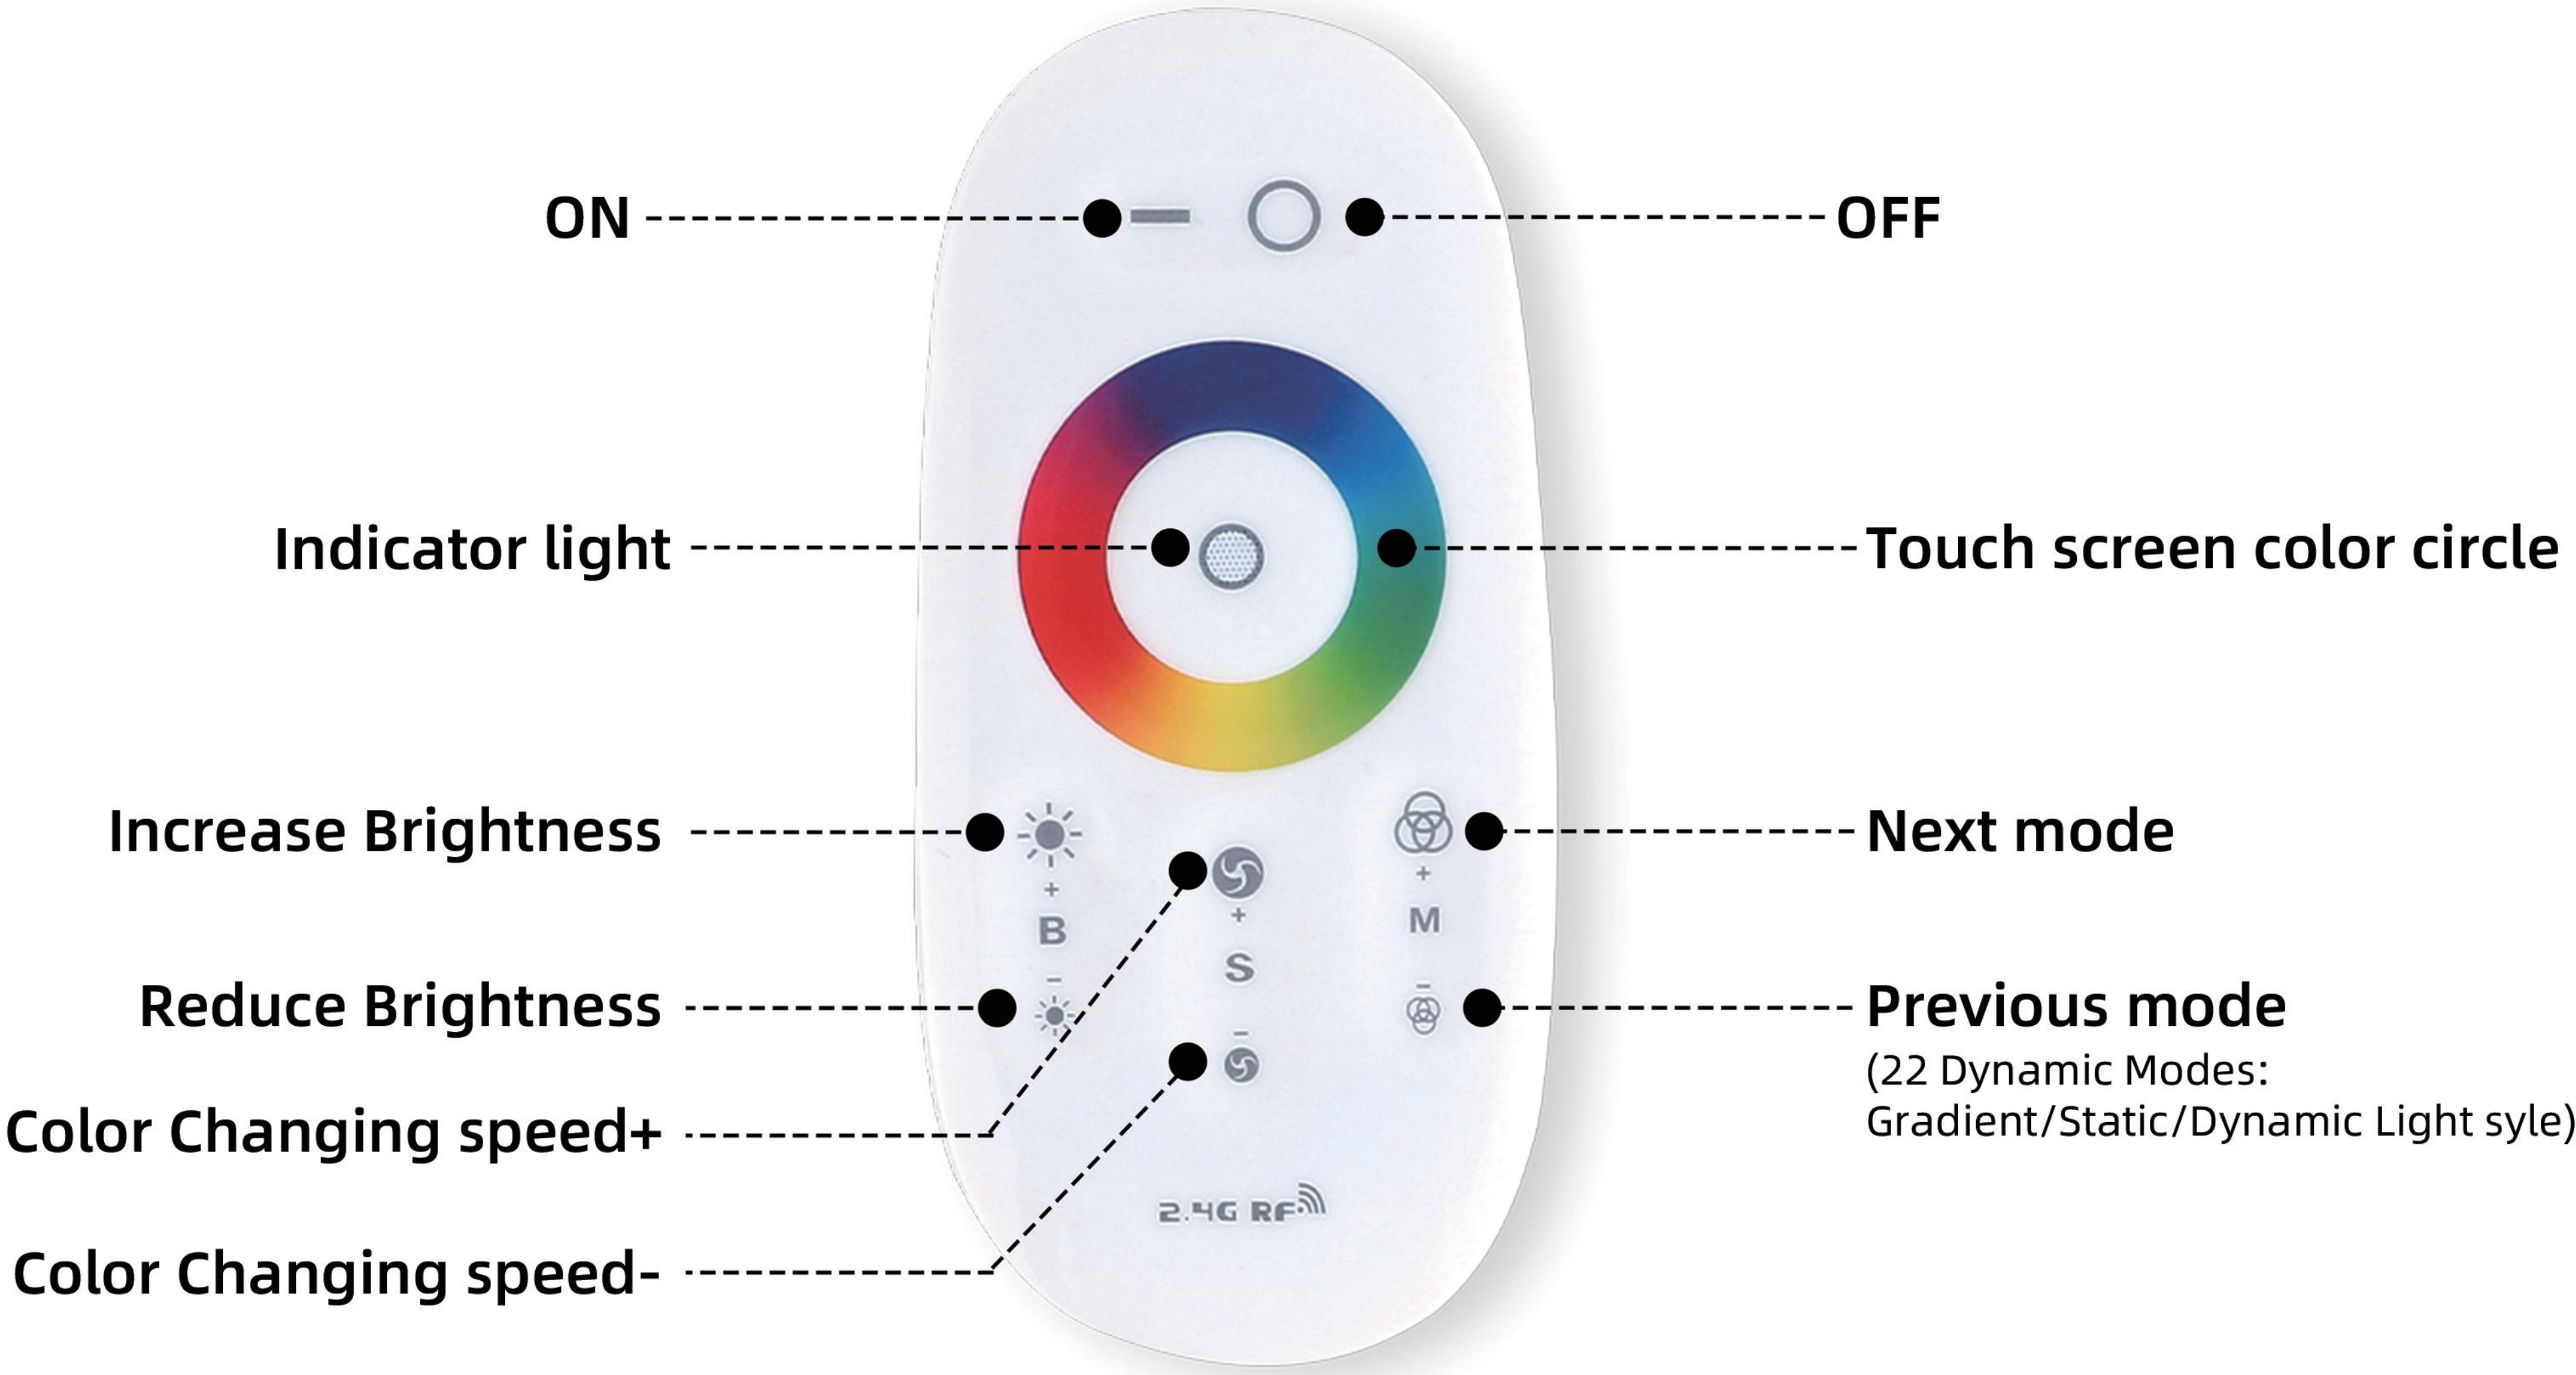

 5.TRANSFORMER INSTRUCTION

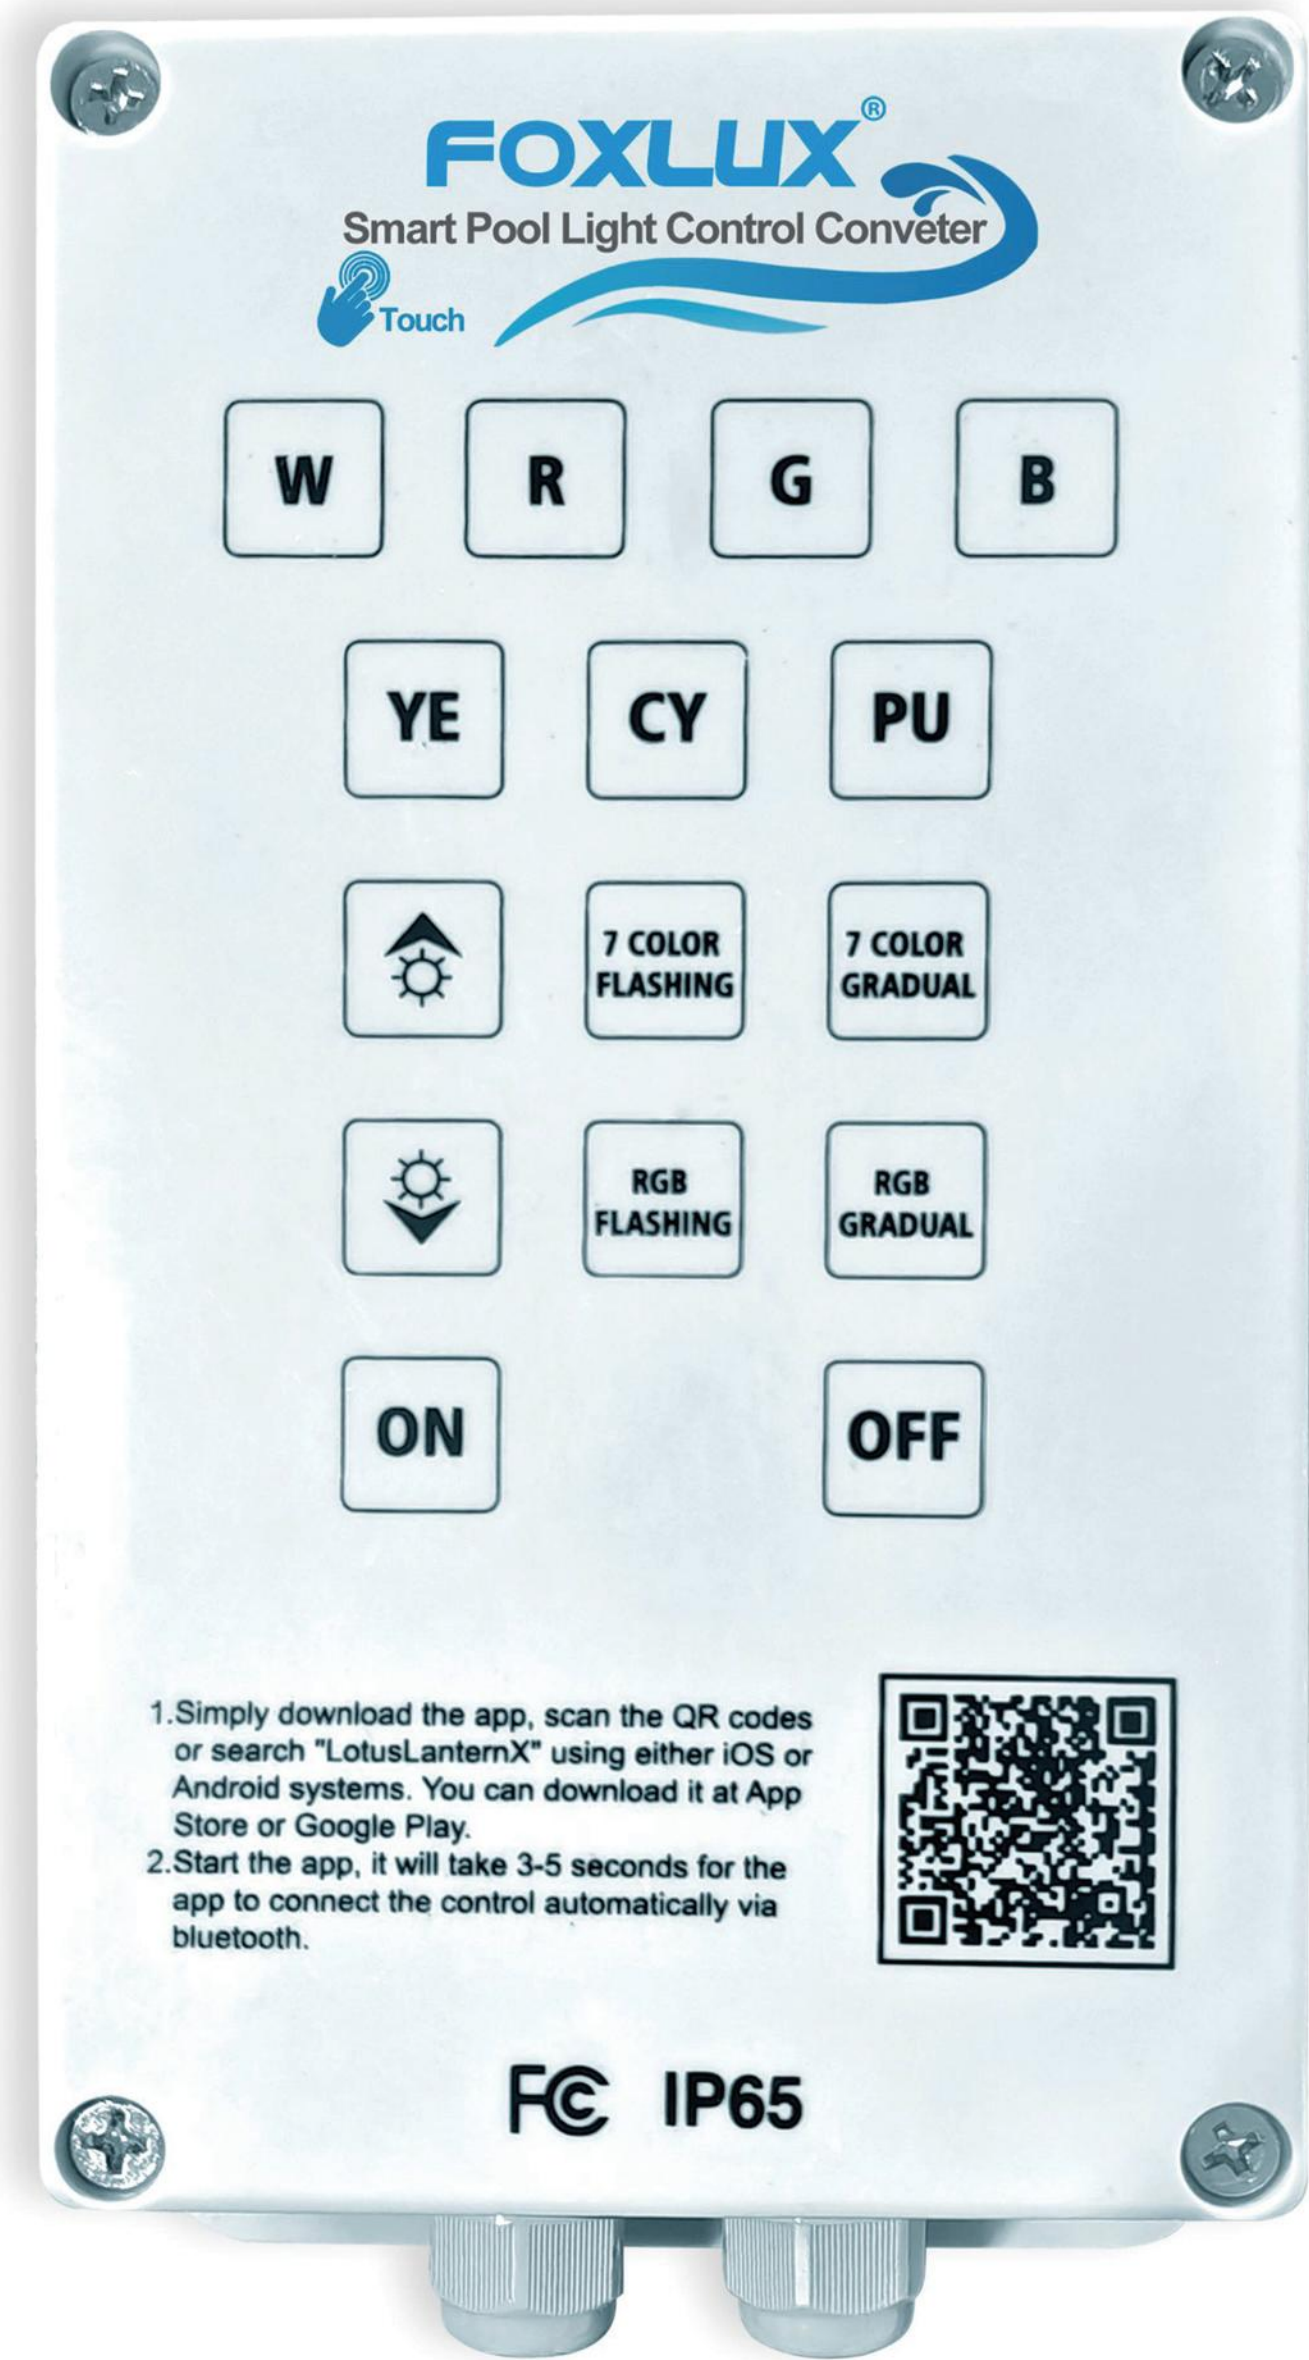

W	White	↑	Increase Brightness
R	Red	7 COLOR FLASHING	7 Colour Flashing
G	Green	7 COLOR GRADUAL	7 Colour Gradual
B	Blue	RGB FLASHING	RGB Flashing
YE	Yellow	RGB GRADUAL	RGB Gradual
CY	Cyan	ON	Power On
PU	Purple	OFF	Power Off
↓	Reduce Brightness		

6. TRANSFORMER INSTRUCTION

1. Simply download the app, scan the QR codes or search "LotusLanternX" using either iOS or Android systems. You can download it at App Store or Google Play.

2. Please make sure that both your phone's Bluetooth and the app's Bluetooth feature are turned on.

3. Start the app, it will take 3-5 seconds for the app to connect the control automatically via Bluetooth.



7. HOW TO CONTROL

3 METHODS TO CONTROL



We would like to remind you that when using the remote control, please make sure to aim it towards the transformer and not towards the light.

8.USAGE INSTRUCTIONS



Two Ropes Leash



9.GENERAL FAULT AND TROUBLESHOOTING METHODS

generic failurerate	Causes	The exclusionmethod
Start without spraying water The motorbuzzes	1. Electricity, too low pressure 2. The impeller has a foreign bodystuck 3	1. Adjust, the whole voltage 2. Clear and remove foreign bodies3. Repair the circuit
Do not spray water Splash small	1. Motor reversal 2. Motor water inlet water	2. Check the wiring head for wading
Protection switch trips frequently	1. Power machine overload 2.Three-phase	1. Excessive current,identification and repair2.Adjust the power supply voltage3. Check the line
	voltageimbalance 3.Line, roadloopholes	

10.CUSTOMER SERVICE

HERE TO HELP

We hope that you have an amazing time with our prodcts
We're always here to help, so if you ever have any questions or need any general advice, please feel free toget in touch.

customer@foxluxpool.com